



Repairing Lexmark Intuition S505 Copy and Scanning

This guide will inform readers how to fix any copy and/or scanning problems.

Written By: Raymond



INTRODUCTION


The scanner unit allows the user to scan documents onto their computer and/or copy and print original document.



TOOLS:

- [Soft Cloth](#) (1)
-

Step 1 — Data USB Cable

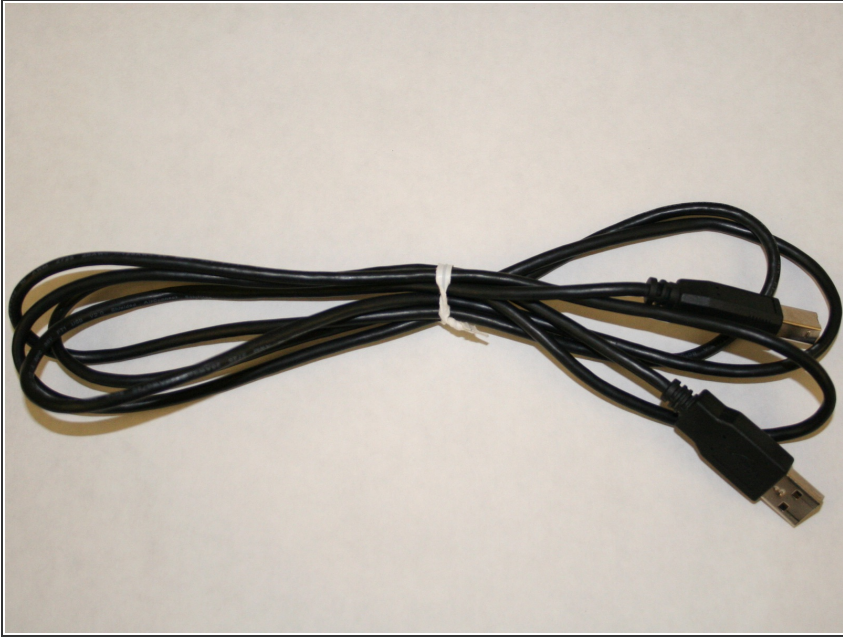

- Locate data USB cable.

Step 2



- Locate the end of the cable that plugs into the printer.

Step 3




- Insert this cable end to the port in the leftmost edge behind the printer where there is a rectangular indent.

Step 4



- Locate the USB end of the cable. Insert that end into your computer.

Step 5 — Wireless Connection

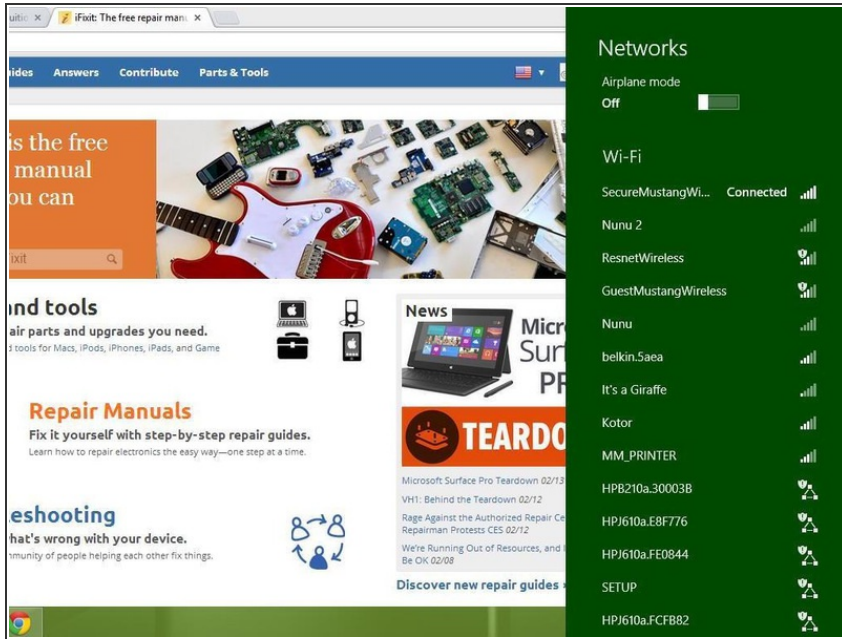

- Turn wireless connection on your computer off and on. Sometimes doing this step is needed to have a connection.
- Check the network to make sure the computer and printer are connected to the same network.

Step 6



- Make sure "Demo Mode" is turned OFF. Locate LED control panel and select "Setup". From there locate "Demo Mode" and turn it off.

Step 7



- Move the printer close to the router to ensure a strong connection.

Step 8 — Copy and Scanning



- Make sure the transparent cover is clean. If not, wipe the glass screen with a polishing cloth. If there is still debris on the glass, try spraying it with a cleaning solution and wiping it again.

Step 9



- If the print not is not clear, make sure the original document is flat on the glass. If the print out is still not clear, try finding a clearer version of your original document.

Step 10



- If above steps do not solve the problem, try re-installing the drive for the printer.

Once your connection is set and that the screen is clear of any debris, you should be able to scan, copy and print documents.

This document was last generated on 2017-06-21 06:24:43 PM.